

#1 Recommended dishwasher and disposal cleaner!*



A NEW ONCE-A-MONTH SOLUTION FOR DISHWASHER AND DISPOSAL ODOR

Affresh™ Dishwasher & Disposal Cleaner: One Product Easily Cleans Two Appliances

The NEW Affresh™ dishwasher & disposal cleaner is the powerful, ground-breaking solution for unwanted dishwasher and disposal odor. These innovative tablets help prevent odor in the dishwasher AND disposal. Developed with the consumer in mind, these cleaner tablets help remove even the most stubborn odors from dishwashers and disposals.

Use Once a Month or As Needed for a Cleaner, Fresher Dishwasher and Disposal

Affresh™ dishwasher & disposal cleaner keeps the dishwasher or disposal fresh for up to a month by penetrating, dissolving and removing odor. It's a fast and simple way to keep the inside of these appliances clean and smelling fresh.

Each Affresh™ Dishwasher & Disposal Cleaner Contains 6 Tablets

 
Retail Package Part #: W10282479
UPC #: 883049194356

Recommended by:



MAYTAG

Amana

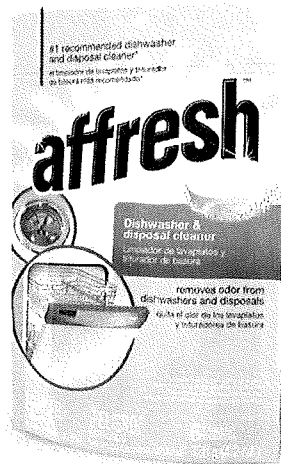

Affresh™ Dishwasher & Disposal Cleaner Retail Unit

 
Instructions for Affresh™ Dishwasher & Disposal Cleaner

Cleaning Dishwasher:
Read all steps completely.

Step 1:

Remove all dishware from the dishwasher. Open the dishwasher and place one tablet in the main detergent tray. Close the tray.


Tablet #1

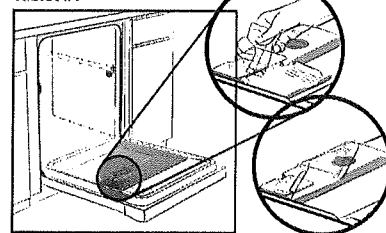

Step 2:

Place the second tablet in the prewash tray or in the bottom of the dishwasher. Close the dishwasher. Run the dishwasher on the most aggressive cycle—heavy duty scrub, high-temperature wash, etc. For best results, continue to Step 3. If you do not have a disposer, skip Step 3.


Tablet #2

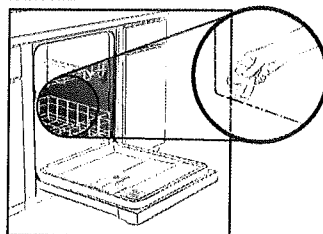

Step 3:


Place a third tablet into the disposal. Turn on hot water to a slow flow. Run the disposal and water for 15 seconds. Turn off disposal and water. Do not flush the disposal completely with water. Water from the dishwasher will clean out the disposal.

Tablet #3

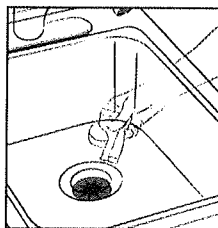

Cleaning Disposal:

Place one tablet in the disposal. Turn on hot water to a slow flow. Run the disposal and water for 15 seconds. Turn off the disposal and water. Wait 30 minutes then flush the disposal with hot water.

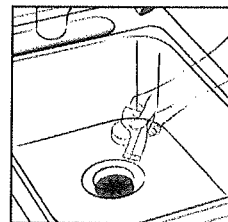

Now Available
See your parts distributor

*Based on dishwasher manufacturer's recommendation. Affresh™ dishwasher & disposal cleaner is made by an affiliate of the dishwasher manufacturer. ®Registered trademark/™ Trademark of Whirlpool, U.S.A., KitchenAid, U.S.A. or Maytag Corporation or its related companies. The shape of the stand mixer is a registered trademark of KitchenAid, U.S.A. ©2009. All rights reserved. Printed in the U.S.A. 8/09. WPX86A1