

Installation Instructions for Dishwasher Door Gasket Replacement Kit

**WDOX1016
Door Gasket Kit**

WDOX 848

Before you begin – Read these instructions completely and carefully.

IMPORTANT: Save these instructions for local inspector's use.

IMPORTANT: OBSERVE ALL GOVERNING CODES AND ORDINANCES.

NOTE TO INSTALLER: Be sure to leave these instructions with the Consumer.

NOTE TO CONSUMER: Keep these instructions with your Use and Care Book for future reference.



To prevent electric shock, disconnect electrical power supply to dishwasher before changing gasket. Do not operate dishwasher until new gasket has been installed.

Tools and Materials required:

Phillips screwdriver

Kit Contents

- Door Gasket
- Instruction sheet

This gasket kit provides a replacement door gasket for your dishwasher.



CAUTION

Before changing gasket, wait at least 1/2 hour after dishwasher has run to be sure heating element is cool.

Do not sit on open dishwasher door while changing the gasket.

STEP 1:

- Disconnect power to dishwasher by removing house fuse or opening circuit breaker.

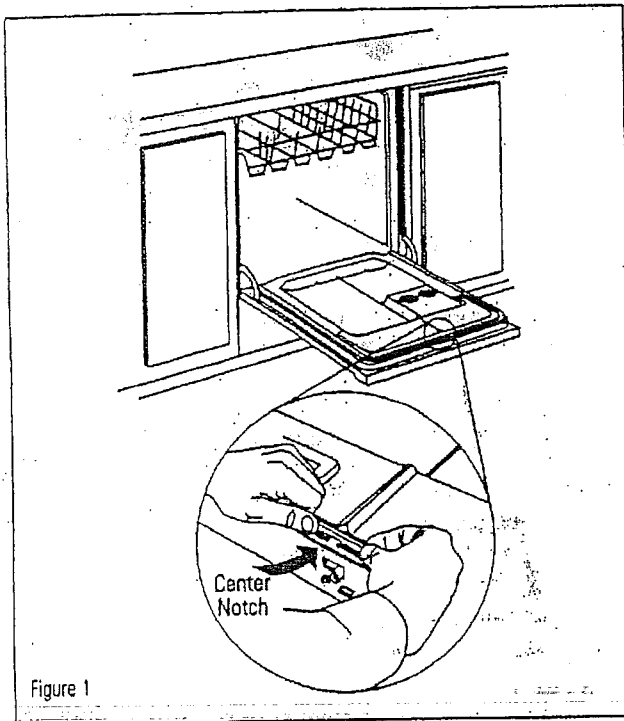


Figure 1

STEP 2:

Remove old gasket

- Open the door fully. Remove lower rack from the inside of the dishwasher.
- Grasp old gasket at the top center of the door and pull straight out. See Figure 1.
- Remove gasket all the way around the door.

- Remove gasket tails by grasping gasket at the bottom of the door and pulling it straight down towards the bottom of the dishwasher tub.

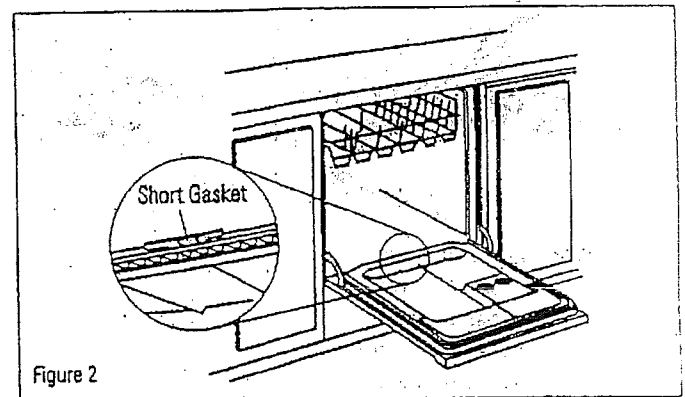


Figure 2

Note: Some dishwasher models have a short gasket insert in the bottom center of the door. Leave this piece in place.

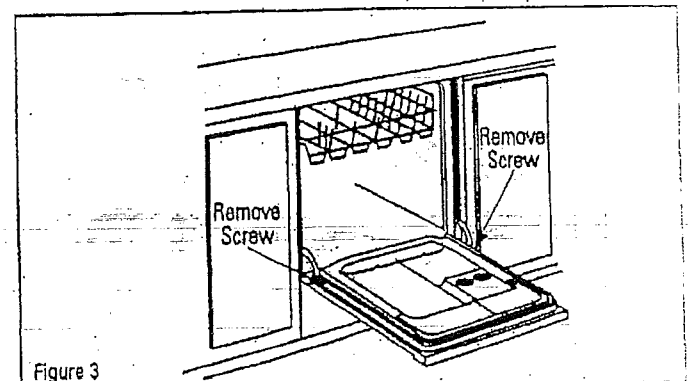


Figure 3

STEP 3:

Remove door screws

- Remove two screws, one on each side at the bottom of the door, just in front of the door hinge. With screws removed the plastic door will flex slightly and allow more fingertip clearance when trying to locate the track on the back side of the door.

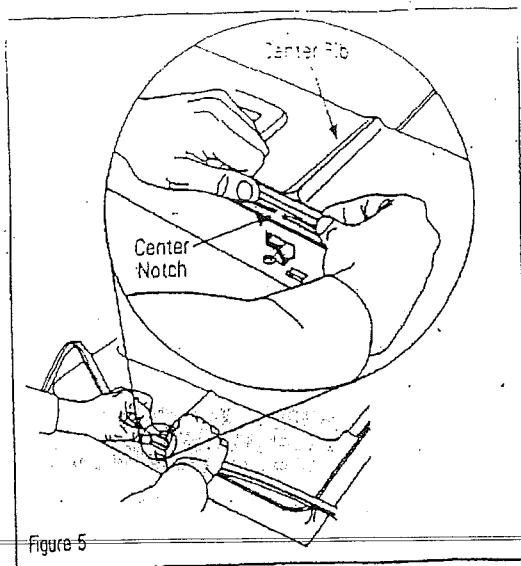


Figure 5

STEP 4:

Install new gasket

- Unroll the gasket. Locate the notch centered in the gasket length. See Figure 5.
- Match the gasket notch to the center rib on the dishwasher door.

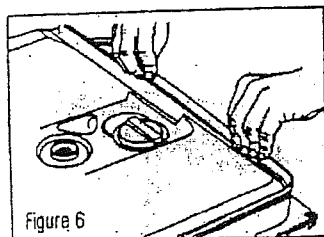


Figure 6

- Press gasket into gasket track firmly. Continue pressing gasket along both sides of the door until you reach the inside curve. Gasket should be fully seated in track. Figure 6.
- The gasket stem should align with the bottom end of the door as shown in Figure 7.

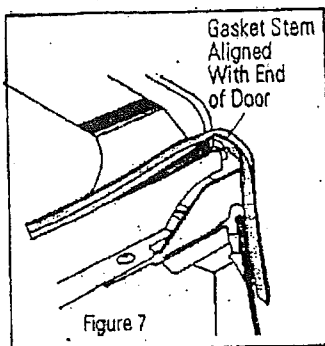


Figure 7

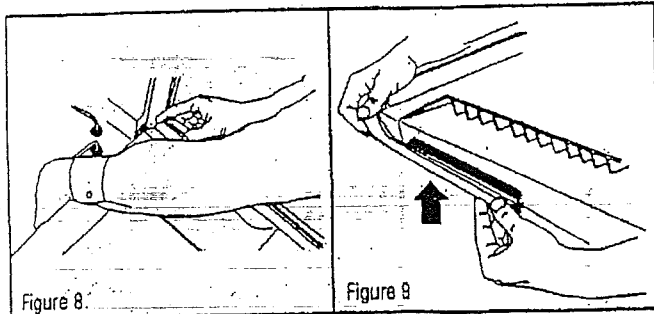


Figure 8

STEP 5:

Install gasket at bottom of door

- Reach into the dishwasher to locate the gasket track at the bottom edge of the door. Figure 8.
- Hold the tail of the gasket against the bottom edge of the door with index finger.

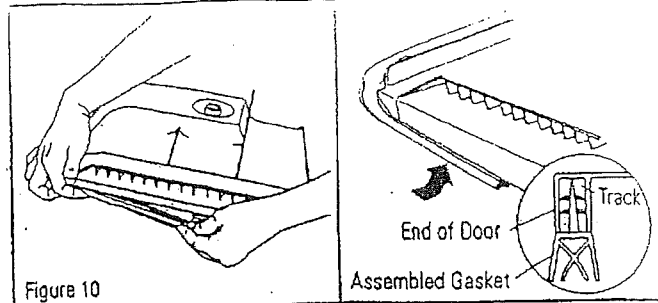


Figure 10

- Hold gasket tail with other hand. Align the stem of the gasket with the bottom of the door edge. Figure 9.
- Slide the gasket down slightly until it clears the bottom of the door.
- Starting at the corner end, push the gasket stem into the track. Pull lightly, on the free end of the gasket until the gasket is snug and smoothly wrapped around the corner. Figure 10.
- Continue pressing gasket into the track moving from corner towards the center of the door.

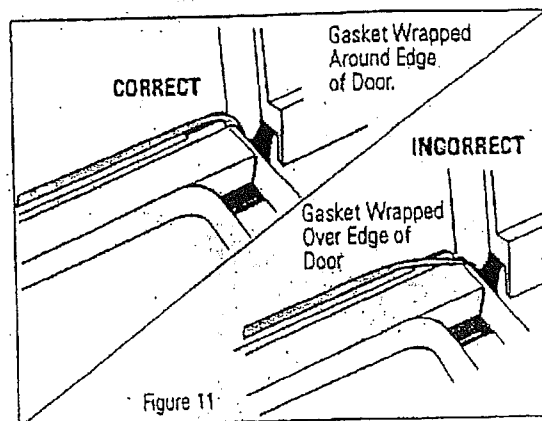


Figure 11

Important: Check to be sure the gasket is firmly seated all the way around and through the bottom turns.

- Follow the same procedure on the opposite side.
- Replace the two door screws.

Note: Dishwasher door may be harder to close, for a short period of time until gasket seats.

STEP 6

Replace lower rack.

STEP 7

Connect (turn on) power supply to the dishwasher.